


FUSE AND FUSE HOLDER


KLSelectronic
www.cnkls.com

9V Battery seat Series


KLS5-BC9V-01 9V Battery seat Series

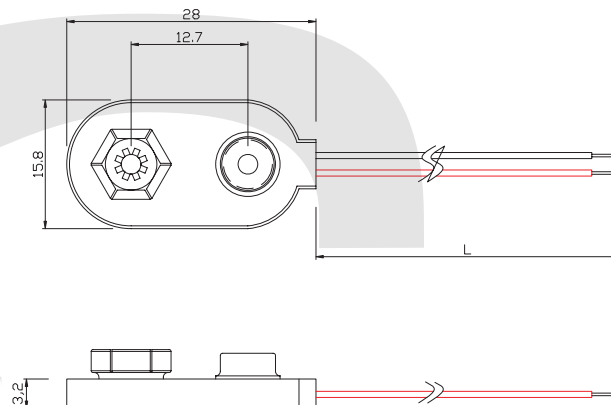

KLS5-BC9V-02 9V Battery seat Series

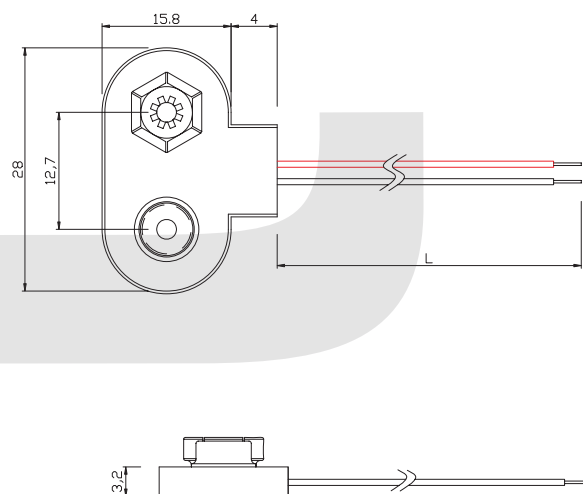


KLS5-BC9V-03 9V Battery seat Series

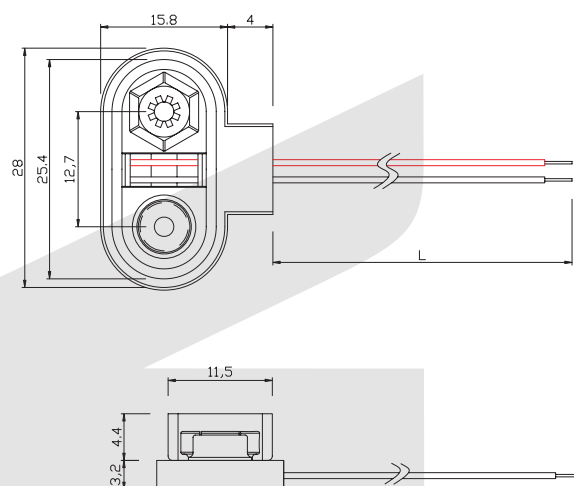


FUSE AND FUSE HOLDER

9V Battery seat Series

KLS5-BC9V-04 9V Battery seat Series

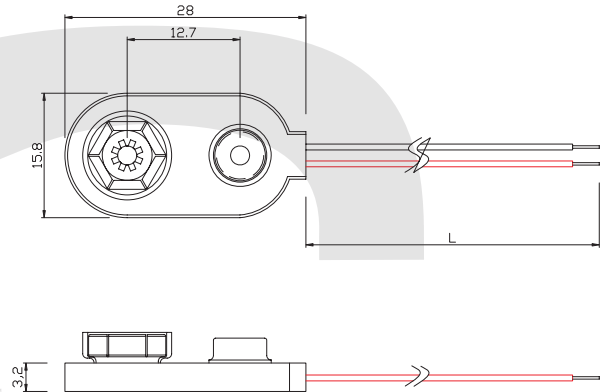

KLS5-BC9V-05 9V Battery seat Series

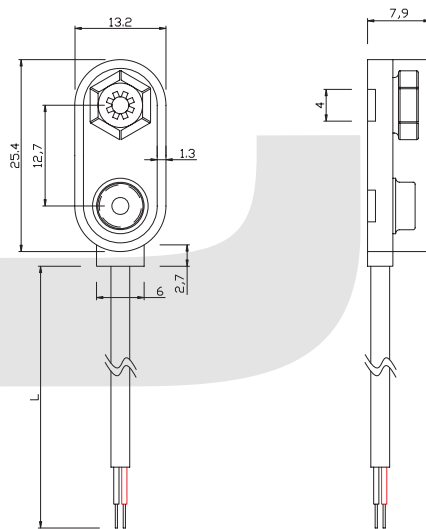

KLS5-BC9V-06 9V Battery seat Series

